


## **IMPORTANT**

We strongly suggest setting up your new tent before going camping to insure that all parts are present and to familiarize yourself with the tent's assembly. This will have a great effect on how well you enjoy your camping trip.

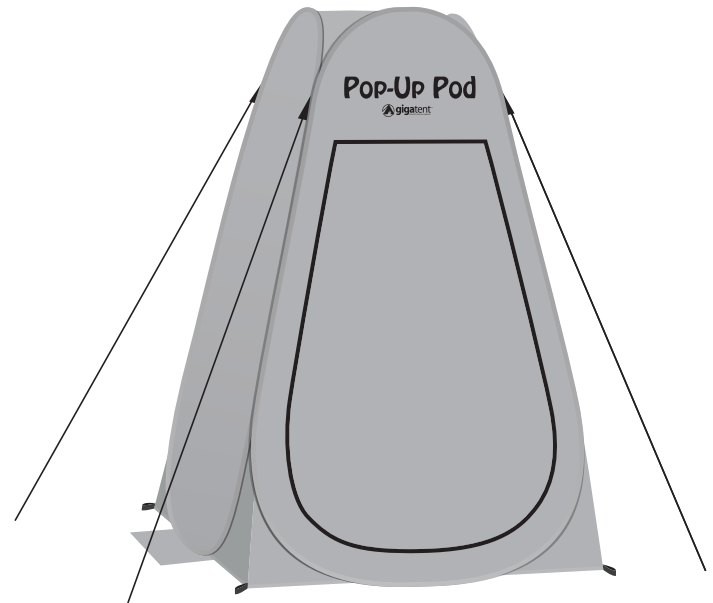

## **ASSEMBLY INSTRUCTIONS**

### **STEP 1:**

Confirm product contents by emptying contents of bag(s) and confirming all parts are included and undamaged.

### **STEP 2:**

Select a smooth level site and spread out your tent.

### **STEP 3:**

Pull tent frame apart to pop open tent.

**CAUTION:** Tent has inner steel wire which may spring open suddenly while attempting to assemble tent.

**TIP:** Frame may need minor adjustment when tent is set up. Gently bend frame into shape if sagging appears.

### **STEP 4:**

Stake down pod on bottom four corners.

It is strongly recommended to attach guylines at the corners near the top of tent and stake down to the ground.

## **DISASSEMBLY INSTRUCTIONS**

### **STEP 1:**

Pick up the tent and lay it on its side.

### **STEP 2:**

Grasp the top of frame and push one of the corners INTO the structure towards the OPPOSITE corner.

### **STEP 3:**

The structure will now fold flat.

### **STEP 4:**

Grasp 2 **DIAGONALLY OPPOSITE** corners and bring them together in one hand. (You now have a loop above and below your hand)

### **STEP 5:**

Kneel down and place the bottom loop on the ground.

### **STEP 6:**

Grasp the outer edge of the top loop furthest away from you and fold inward toward the lower loop and lay flat on the ground. (You now have 2 loops on top of a larger one)

### **STEP 7:**

Slide one of the smaller loops over the one next to it and grasp the outside edges of the entire folded playhouse.

### **STEP 8:**

Slowly move your hands around the outside edges to make all of the loops the same size.

### **STEP 9:**

Place folded structure into carry case.

# Manufacturer's Warranty

Warranty covers product to be free from defects in material and workmanship for 14 days after date of purchase.

Warranty does not cover natural breakdown of materials that occur inevitably with extended use (e.g., UV damage, exhausted zippers, defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

This product is covered for 14 days from date of purchase. Please check all contents to verify product has no missing or broken parts. Gigatent will mail replacement parts free of charge within the 14 Day Manufacturer's Warranty by calling 1-877-836-8701 or emailing [customerservice@gigatent.com](mailto:customerservice@gigatent.com). We highly recommend logging on to our website at [www.gigatent.com](http://www.gigatent.com) should you need customer service.

## WARNING:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the color and integrity of this product. UV damage is not covered under our warranty.

**WARNING : NEVER LEAVE BURNING FIRE UNATTENDED**

Wind may topple product. Use extra caution.

Keep all Flame and Heat away from product.

**THIS PRODUCT IS NOT FIRE PROOF.**

**IF LEFT TOO CLOSE OR ON OPEN FLAME THE PRODUCT WILL BURN OR BE SEVERELY DAMAGED.**

**CAUTION:** Use caution when using propane stove on this product. Unintended fire may result in damage of product or bodily harm.

**Manufactured in China for  
Gigatent  
55 Haul Rd  
Wayne, New Jersey 07470  
[www.gigatent.com](http://www.gigatent.com)**



For questions or concerns call Gigatent at our Toll Free Number:  
877-836-8701 Monday-Thursday 9am-5pm EST, Friday 9am-12pm EST or email us at [customerservice@gigatent.com](mailto:customerservice@gigatent.com).  
For replacement parts, please login to our website at [gigatent.com](http://gigatent.com) and click the link "replacement parts".

TO VIEW FULL SELECTION OF OUR PRODUCT LINE, GO TO [WWW.GIGATENT.COM](http://WWW.GIGATENT.COM)