

# **Owner's Manual**

MODEL # CT148/ Teepee
Teepee Dimensions 40" x 46"




DESCRIPTION	QTY.
TEPEE 100% Polyester	1
POLES Fiberglass Pole	8
CARRY POUCH 100% Polyester	1

## **ASSEMBLY INSTRUCTIONS**

## **TEEPEE SET UP**

- 1) Assemble all poles.
- 2) Slide each of the 4 shorter poles through the floor pole sleeves. (Figure A).
- 3) Attach the 4 corner hubs to connect the floor poles. NOTE: arrows are embossed on the portion of hubs that connect tp the floor poles. (Figure B).
- 4) Slide each of the wall poles through the pole sleeves starting at the top of thre teppee. Connect the bottom of the poles to each of the remainding portion of the hubs. (Figure C).

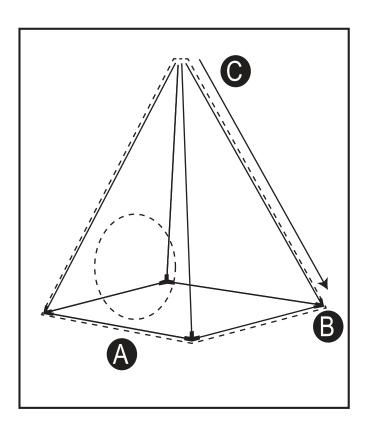



# **Manufacturer's Warranty**

Warranty covers product to be free from defects in material and workmanship for 14 days after date of purchase.

Warranty does not cover natural breakdown of materials that occur inevitably with extended use (e.g., UV damage, exhausted zippers, defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care.

This product is covered for 14 days from date of purchase. Please check all contents to verify product has no missing or broken parts. Gigatent will mail replacement parts free of charge within the 14 Day Manufacturer's Warranty by calling 1-877-836-8701 or emailing customerservice@gigatent.com. We highly recommend logging on to our website at www.gigatent.com should you need customer service. Any parts in need of replacement after the 14 Day Manufacturer's Warranty can be purchased for a reasonable charge, plus shipping and handling. We require that products accepted for any repair must be properly cleaned according to our care instructions.

### **WARNING:**

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty.

WARNING: NEVER LEAVE CHILDREN UNATTENDED. AGES 3 AND UP RECOMMENDED.

Play tent for indoor and outdoor use.

Keep all Flame and Heat away from tent and tent fabric. This tent meets flammability requirements of CPAI-84.

THIS TENT IS NOT FIRE PROOF.

IF LEFT IN OPEN FLAME THE TENT WILL BURN.

CAUTION: Never use any fuel-burning or oxygen- consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.

MADE IN CHINA.

For questions or concerns call Gigatent at our Toll Free Number: 877-836-8701 Monday-Thursday 9am-5pm EST, Friday 9am-12pm EST or email us at customerservice@gigatent.com For replacement parts login to gigatent.com/replacements

NEVER LEAVE CHILDREN UNATTENDED.
WINDY CONDITIONS MAY UPROOT THE TENT.
ALWAYS STAKE DOWN TENT. ADULT SUPERVISION REQUIRED.
AGES 3 AND UP RECOMMENDED.

### **WARNING:**

Never use any fuel-burning or oxygen-consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death

Keen all flame and heat away from tent and tent fabric This tent meets flammability requirements of CPIA -84.
THIS TENT IS NOT FIRE PROOF. IF LEFT IN OPEN FLAME THE TENT WILL BURN.

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV sure will rapidly break down the fabric of this product. UV damage is not covered under our warranty

This tent meets the state of California's requirement of Prop-65.

# **WASHING & CARE INFORMATION**

Hand wash using a mild dishwashing soap and soft sponge, then allow the fabric to completely air dry. To prevent mold or mildew do not store wet or damp.

## gigatent

Manufactured in China for Wayne, New Jersey 07470 www.gigatent.com 1-877-836-8701

TO VIEW FULL SELECTION OF OUR PLAY TENT PRODUCT LINE, GO TO WWW. GIGATENT.COM

STYLE #:CT148

Contents and colors may vary. Please retain package