




Model # AC012

# Grill 'N' Go

## Portable Charcoal Grill

### Owner's Manual



<p> <b>CARBON MONOXIDE HAZARD</b> </p>	<p> <b>WARNING</b> </p>
<p>Burning charcoal gives off carbon monoxide, which has no odor and can cause death.</p> <p><b>DO NOT</b> burn charcoal inside homes, vehicles, tents, garages or any enclosed areas.</p> <p>Use only outdoors where it is well ventilated.</p>	<p>This manual contains important information necessary for the proper and safe use of this grill.</p> <p>Read and follow all warnings and instructions before using grill and during use.</p> <p>Keep this manual for future reference.</p>
<p>Failure to follow these warnings and instructions properly could result in fire or explosion, which could cause property damage, personal injury, or death.</p>	



## GENERAL WARNING AND SAFETY INFORMATION



- Keep children and pets away from grill at all times. Do not allow children to use grill.
- Only use charcoal lighting fluid. Never use gasoline, alcohol or other highly volatile fluids to ignite charcoal. These fluids can explode causing injury or death.
- Grill is HOT while in use and will remain HOT for a period of time afterwards. Do not touch any part of the grill without wearing protective gloves.
- Never move grill when in use. Allow grill to cool completely before moving or storing.
- Never leave HOT coals or ashes unattended.
- Do not store grill with HOT ashes or charcoal inside grill. Store only when fire is completely out and all surfaces are cold.
- Dispose of cold ashes by placing them in aluminum foil, soaking with water and discarding in a non-combustible container.
- Never use this product for anything other than its intended purpose. This grill is not for commercial use.
- Always use this grill in accordance with all applicable local, state and federal fire codes.
- Keep a fire extinguisher at all times while operating grill.
- Never leave grill unattended while in use.
- Never use inside an enclosed area such as a patio, grage, building or tent.
- Never use inside a vehicle, not even a recreational vehicle such as a motor home, camper or truck bed.
- Never operate this grill under any overhead construction such as roof coverings, carpets, carports, awnings or overhangs.
- Maintain a minimum distance of 10 feet from all structures.
- Keep area clear of all combustible materials such as wood, dry plants, grass, brush, paper or canvas.
- Never operate this grill within 25 feet of flammable liquids.
- Never operate this grill within 10 feet of a gas liquids.
- Never use this grill as a heater (READ CARBON MONOXIDE HAZARD).
- Use this grill only on a stable, level surface to prevent tipping.
- Use this grill only on a stable, level surface to prevent tipping.
- Use on non-combustible surfaces such as dirt, concrete, brick or rock.



### WARNING



Combustion by-product produced when using this product contains chemicals known to the State of California to cause birth defects, other reproductive harm, or cancer. The materials used in this product may contain lead, a chemical known to the State of California to cause birth defects and other reproductive harm.



### WARNING




To ensure that it is safe to eat, food must be cooked to the minimum internal temperatures listed in the table below.

USDA* Safe Minimum Internal Temperatures	
Fish	145° F
Pork	160° F
Egg Dishes	160° F
Steaks and Roasts of Beef, Veal or Lamb	145° F
Ground Beef, Veal or Lamb	160° F
Whole Poultry (Turkey, Chicken, Duck, etc.)	165° F
Ground or Pieces Poultry (Chicken Breast, etc)	165° F

# Grill 'N' Go

## Portable Charcoal Grill

### Assembly Instruction

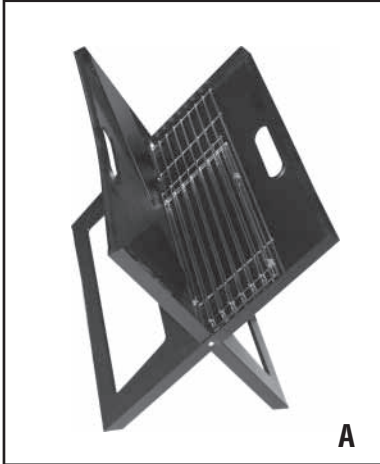

1. Remove the Portable Grill from the packaging.
2. Pull open the grill from the handles. (Figure A)
3. Remove grates from inside grill. Swing open side walls and secure into place. (Figure B)
4. Set charcoal grate (smaller of the 2 grates) into the grill. Place charcoal briquettes on top of charcoal grate and light charcoals. Set cooking grate on top of grill. (Figure C)

#### Storage

After having cleaned the Portable Grill, let cool off completely. Discard charcoals and wipe down grates and grill. Place grates into grill and fold away for convenient storage.

#### Caution

- Keep away from curtains, flammable items, heating appliances.
- Use this appliance only in outdoors and fully ventilated areas.
- Appliance is not intended for use by children, people with limited physical abilities, sensory or mental abilities or lack of experience and knowledge unless supervised during the use of the appliance by a person responsible for their safety.

# WARRANTY

## WARRANTY TERM:

1 Year from date of purchase

## WHAT IS COVERED:

Warrants to the original purchaser that its products are free from defects in material and workmanship.

## WHAT IS NOT COVERED:

Shall not be responsible for the natural breakdown of materials that occurs inevitably with extended use such as rust, paint finish storm damage, misuse or improper care.

## WHAT WE WILL DO:

If after inspection we find that product failed due to a manufacturing or material defect, we will repair or place the product, at our option, without charge.

## HOW TO OBTAIN WARRANTY SERVICE:

Return the product, freight prepaid, to GIGATENT Customer Service Department. For return authorization e-mail our office and obtain an Authorization number. Authorization numbers are valid for 30 days from the date of issuance, and must be obtained within 30 days of ship date. Returns will be handled in a timely matter. Collect shipments or shipments without return authorization will not be accepted.

We accept Visa, Master Card and American Express.

