



DESCRIPTION	QTY.
<b>PYRAMID TENT</b> 100% Polyester	1 _____
<b>CUBE</b> 100% Polyester	1 _____
<b>TUNNEL</b> 100% Polyester	1 _____
<b>CARRY POUCH</b> 100% Polyester	1 _____

## ASSEMBLY INSTRUCTIONS

### STEP 1:

Confirm product contents by emptying contents of bag(s) and confirming all parts are included and undamaged.

### STEP 2:

Select a smooth level area to open the play set.

### STEP 3:

Pull pyramid tent frame apart to pop open tent.

**CAUTION:** Tent has inner steel wire which may spring open suddenly while attempting to assemble tent.

**TIP:** Frame may need minor adjustment when tent is set up. Gently bend frame into shape if sagging appears.

### STEP 4:

Repeat process for cube tent and tunnel.

### STEP 5:

Connect all three structures using the loop and toggles to make 1 large play set, or play with structures separately.

For questions or concerns call Gigatent at our  
Toll Free Number: 877-836-8701  
Monday-Thursday 9am-5pm EST, Friday 9am-12pm EST  
or email us at [customerservice@gigatent.com](mailto:customerservice@gigatent.com)  
For replacement parts login to [gigatent.com/replacements](http://gigatent.com/replacements)

**WARNING :**  
NEVER LEAVE CHILDREN UNATTENDED.  
WINDY CONDITIONS MAY UPROOT THE TENT.  
ALWAYS STAKE DOWN TENT.  
ADULT SUPERVISION REQUIRED.

AGES 3 AND UP RECOMMENDED.

## DISASSEMBLY INSTRUCTIONS

### STEP 1:

Pick up the tent and lay it on its side.

### STEP 2:

Grasp the top of frame and push one of the corners INTO the structure towards the OPPOSITE corner.

### STEP 3:

The structure will now fold flat.

### STEP 4:

Grasp 2 DIAGONALLY OPPOSITE corners and bring them together in one hand. (You now have a loop above and below your hand)

### STEP 5:

Kneel down and place the bottom loop on the ground.

### STEP 6:

Grasp the outer edge of the top loop furthest away from you and fold inward toward the lower loop and lay flat on the ground. (You now have 2 loops on top of a larger one)

### STEP 7:

Slide one of the smaller loops over the one next to it and grasp the outside edges of the entire folded play tent.

### STEP 8:

Slowly move your hands around the outside edges to make all of the loops the same size.

### STEP 9:

Place folded structure into carry case.

### WASHING & CARE INFORMATION

Hand wash using a mild dishwashing soap and soft sponge, then allow the fabric to completely air dry. To prevent mold or mildew do not store wet or damp.

### CAUTION:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty

### WARNING:

Keep all flame and heat away from tent and tent fabric. This tent meets flammability requirements of CPIA-84. THIS TENT IS NOT FIRE PROOF. IF LEFT IN OPEN FLAME THE TENT WILL BURN.

### CAUTION:

Never use any fuel-burning or oxygen-consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death



## Manufacturer's Warranty

Warranty covers product to be free from defects in material and workmanship for 14 days after date of purchase.

Warranty does not cover natural breakdown of materials that occur inevitably with extended use (e.g., UV damage, exhausted zippers, defects caused by accident, abuse, alteration, animal attack, storm damage, misuse or improper care).

This product is covered for 14 days from date of purchase. Please check all contents to verify product has no missing or broken parts. Gigatent will mail replacement parts free of charge within the 14 Day Manufacturer's Warranty by calling 1-877-836-8701 or emailing [customerservice@gigatent.com](mailto:customerservice@gigatent.com). We highly recommend logging on to our website at [www.gigatent.com](http://www.gigatent.com) should you need customer service. Any parts in need of replacement after the 14 Day Manufacturer's Warranty can be purchased for a reasonable charge, plus shipping and handling. We require that products accepted for any repair must be properly cleaned according to our care instructions.

### WARNING:

This product was not designed to be left out in the sunlight for extended periods of time. Prolonged UV exposure will rapidly break down the fabric of this product. UV damage is not covered under our warranty.

**WARNING : NEVER LEAVE CHILDREN UNATTENDED.**

**AGES 3 AND UP RECOMMENDED.**

Play tent for indoor and outdoor use.

Keep all Flame and Heat away from tent and tent fabric.

This tent meets flammability requirements of CPAI-84.

**THIS TENT IS NOT FIRE PROOF.**

**IF LEFT IN OPEN FLAME THE TENT WILL BURN.**

**CAUTION:** Never use any fuel-burning or oxygen- consuming devices, or any devices that produce fumes, including stoves, lanterns, candles, hibachis or heaters in or around your tent. This can result in carbon monoxide poisoning, injury or death.

**MADE IN CHINA.**