

STOP!

Read Instructions prior to assembling tent.

The tent assembly you are about to experience will knock your socks off! That said, we don't want it to knock your head off, or anyone else's. The Mantica employs an inner tension frame that "wants" to pop open. Make sure the space you're camping in is clear of people, pets, fire and gear. While grasping the frame tightly in one hand, release the strap with your other hand. Now simply throw the tent into the air, away from you, and in the general direction of your camping area. POP! You're tent is now opened! At this stage, you've almost completed the assembly of your tent! Follow the diagram below to get a better picture for properly assembling the Mantica tent. Thanks for choosing Gigatent.

ASSEMBLY INSTRUCTIONS

1. Firmly grasp outer frame of tent with one hand and release the elastic strap with the other hand.
2. Throw tent into the air to pop open.
3. Pull out the tent corners and stake down.
4. Insert pole into sleeve and then insert pole ends into grommets.
5. Stake down the fly with the guy lines.

PACKING INSTRUCTIONS

1. Pull the top edges of the front and back ends of frame together and twist to form 2 large loops.
2. Twist one side inward and then repeat for the other side.
3. Tuck in excess fabric into the loops.
4. Press frame straight down to the ground. NOTE: ensure bottom of loops do not slide apart when pressing down on frame.
5. Frame will form a "figure 8" when pushed all the way down to the ground. You should now have 4 smaller loops, (2 on each side).
6. Fold one side of loops onto the other. The loops will bend at the cross section of the figure 8.
7. Pull strap over the folded tent to keep it from opening. Stuff tent and fly into the carry bag.

NOTE: MAKE SURE TENT IS CLEAN AND DRY PRIOR TO PACKING INTO CARRY BAG. IF YOU MUST PACK AWAY WET, BE SURE TO OPEN TENT AND LET IT DRY AS SOON AS POSSIBLE. STORING WET TENT IN CARRY BAG WET WILL CAUSE MOLD AND IS NOT COVERED UNDER OUR WARRANTY.

gigatent
THE NEXT LEVEL IN CAMPING